


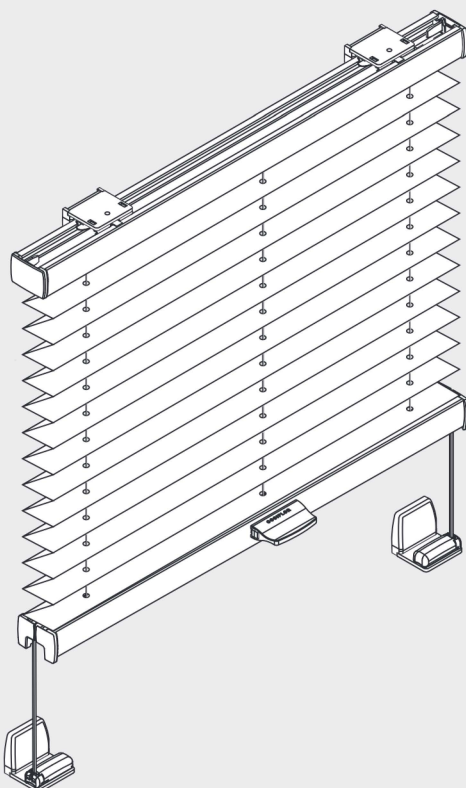
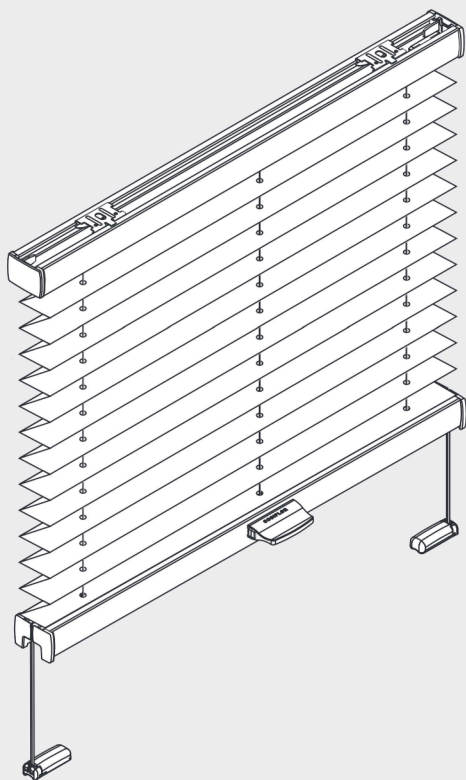


Montageanleitung für Cosiflor VS 1, VS 3, VS 3 SD













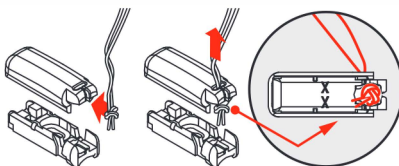


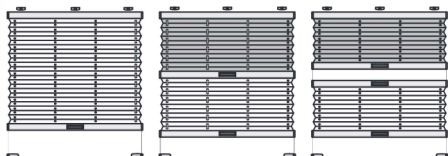


Falzmontage















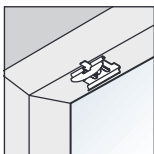


2,2 mm Ø 2,0 mm Ø 1,5 mm Ø

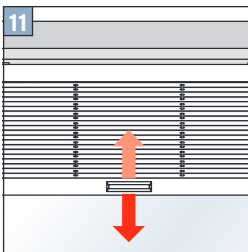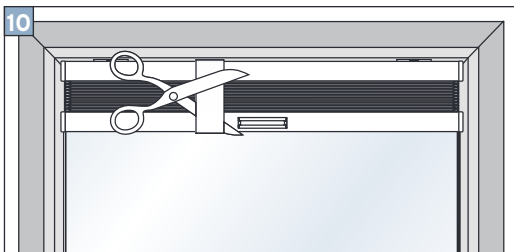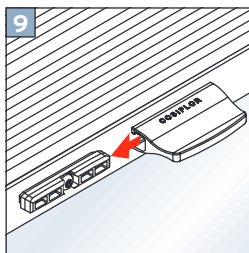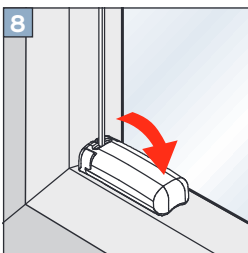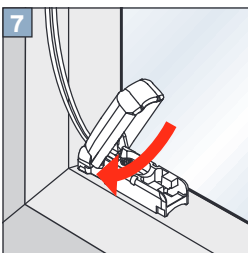
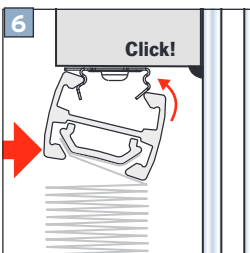
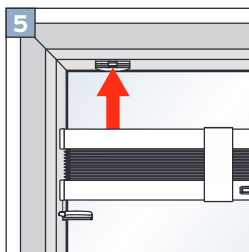
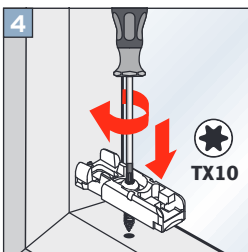
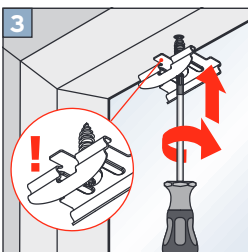
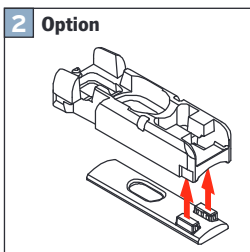
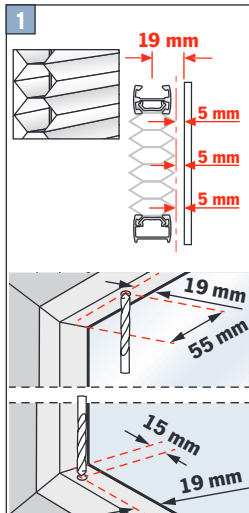
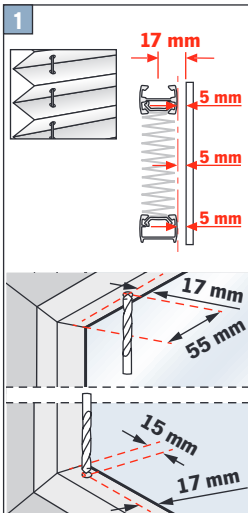
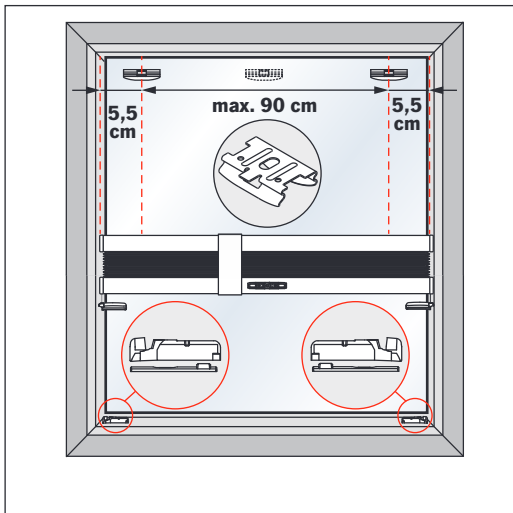


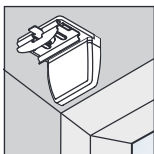

Winkelmontage

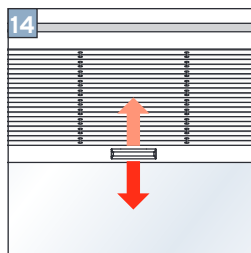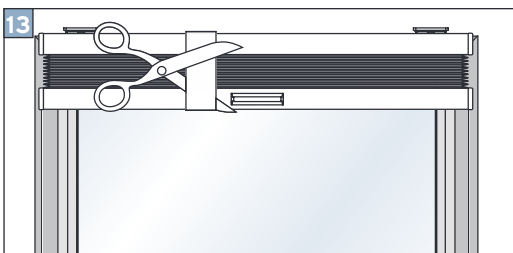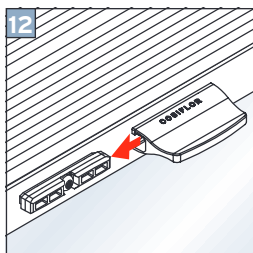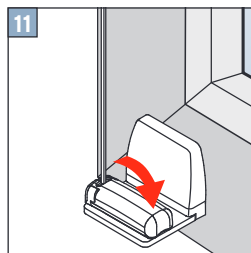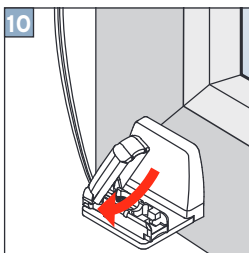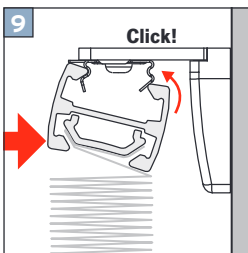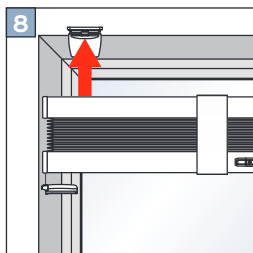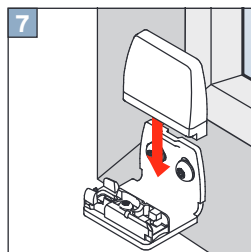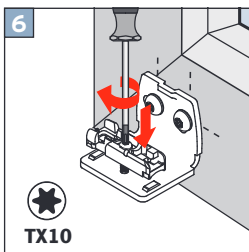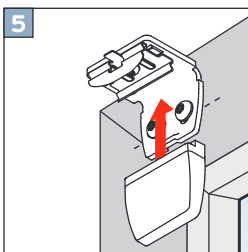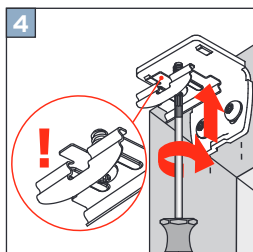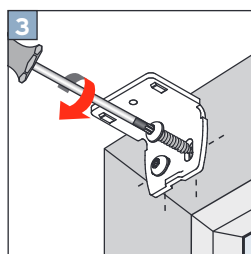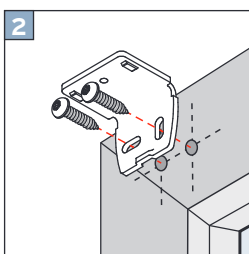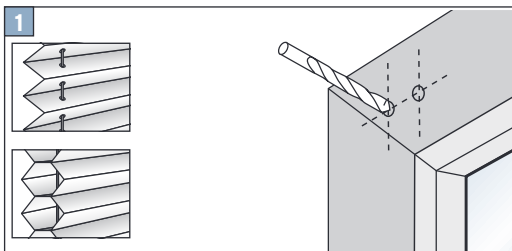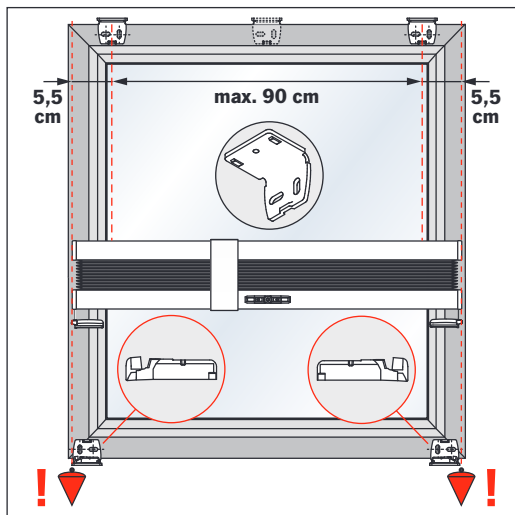

DEMONTAGE

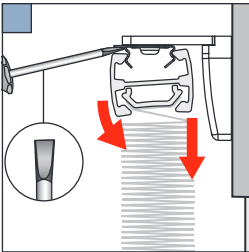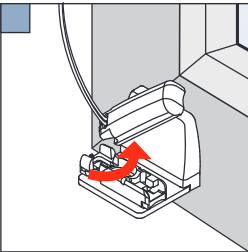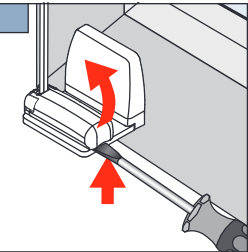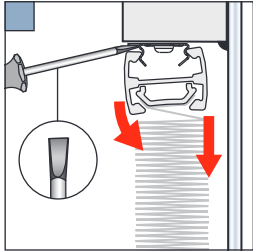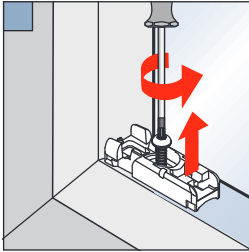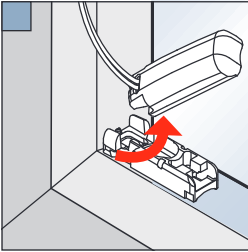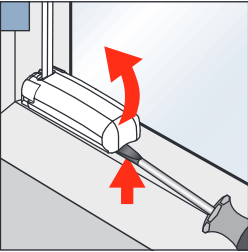

Optional: Bedienstab

